



FCU-6001-SFP+

10G/5G/2.5G/1G Copper to
10GBASE-X SFP+ Media Converter



Version 1.0

User Manual





FCU-6001-SFP+ User Manual V 1.0

© Copyright 2019 Antaira Technologies, LLC.

All Rights Reserved

This document contains information, which is protected by copyright. Reproduction, adaptation or translation without prior permission is prohibited, except as allowed under the copyright laws.

Trademark Information

Antaira is a registered trademark of Antaira Technologies, LLC., Microsoft Windows and the Windows logo are the trademarks of Microsoft Corp. NetWare is the registered trademark of Novell Inc. WMM and WPA are the registered trademarks of Wi-Fi Alliance. All other brand and product names are trademarks or registered trademarks of their respective owners.

Notice: Copyrights © 2019 by Antaira Technologies, LLC. All rights reserved. Reproduction, adaptation, or translation without prior permission of Antaira Technologies, LLC. is prohibited, except as allowed under the copyright laws.

Disclaimer

Antaira Technologies, LLC. provides this manual without warranty of any kind, expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Antaira Technologies, LLC. may make improvements and/or changes to the product and/or specifications of the product described in this manual, without prior notice. Antaira Technologies, LLC. will not be liable for any technical inaccuracies or typographical errors found in this guide. Changes are periodically made to the information contained herein and will be incorporated into later versions of the manual. The information contained is subject to change without prior notice.



FCU-6001-SFP+ User Manual V 1.0

FCC Notice

This equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

CE Mark Warning

This is a Class-A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

Antaira 10G/5G/2.5G/1G Copper to 10GBASE-X SFP+ Media Converter User's Manual

MODEL: FCU-6001-SFP+

REVISION: 1.0 (JANUARY, 2019)

This document is the current official release manual. Please check our website (www.antaira.com) for any updated manual or contact us by e-mail (support@antaira.com).



Antaira Technologies - Media Converter FCU-6001-SFP+ User Manual V 1.0

Table of Contents

1.		Overview	5
	1.1	Key Features	
	1.2	Package Contents	6
2.		Hardware Description	7
	2.1	Physical Dimensions	7
	2.2	Front Panel	8
	2.3	Rear View	9
	2.4	Power Information	e
3.		Mounting Installation	11
	3.1	Stand Alone	
	3.2	Wall Mounting	11
	3.3	Media Chassis Installation	12
4.		Hardware Installation	13
	4.1	Installing the SFP+ Transceiver	13
	4.2	Cabling	15
5.		Trouble Shooting	16
6.		Technical Specifications	17



Antaira Technologies - Media Converter FCU-6001-SFP+ User Manual V 1.0

1. Overview

Flexible and Reliable Network Distance Extension Solution

Antaira's FCU-6001-SFP+ media converter is equipped with one **10G/5G/2.5G/1G BASE-T** autonegotiation port and one **10GBASE-X SFP+** slot. It supports 10Gigabit Ethernet media conversion from copper 10GBASE-T to fiber multi-mode or single-mode, utilizing 10GBASE-SR or 10GBASE-LR SFP+ transceiver installed in the SFP+ slot to extend distances to servers, switches, and patch panels. The deployment distance can be extended from 300 meters (multi-mode) to up to 60 kilometers (single-mode). They are designed for use in network environments where the ultrahigh bandwidth provided by 10Gigabit Ethernet is required (i.e. data center cloud computing, enterprise backbones, campus networks, and carrier infrastructure).

High Performance 10Gbps Ethernet Capacity

The FCU-6001-SFP+ offers wire-speed packets transfer performance without risk of packet loss. The high data throughput of the device makes it ideal for most gigabit environments. With a 20Gbps internal fabric and featuring auto negotiation support in its 10 Gigabit port, the FCU-6001-SFP+ media converter can handle large amounts of data in a secure topology linking to a backbone or high capacity servers.

Fiber-optic Linking Capability Enables Extension of Network Deployment

The SFP+ slot of the FCU-6001-SFP+ is compatible with **10GBASE-SR** or **10GBASE-LR** (Small Form Factor Pluggable) fiber-optic transceivers. The fiber optic uplink capability guarantees the throughput to all nodes hooked into the network and the 10 Gigabit Ethernet distance can be extended from 300 meters (multi-mode fiber cable) to 10/40/60 kilometers (single-mode fiber cable). It is ideal for applications within data centers and distributions.

Low Power Consumption

The FCU-6001-SFP+, adopting the advanced chip technology, has the power-saving feature such as a low power consumption of only 3.75 watts when in full operation.



FCU-6001-SFP+ User Manual V 1.0

1.1 Key Features

FCU-6001-SFP+ Physical Port

One 10G/5G/2.5G/1G BASE-T RJ45 interface with auto MDI/MDI-X function One 10GBASE-X SFP+ slot

Layer 2 Features

IEEE 802.3ab/802.3bz/802.3ae Ethernet standard compliant

Supports auto-negotiation and 1/2.5/5/10Gbps full duplex mode

Prevents packet loss with back pressure (half-duplex) and IEEE 802.3x pause frame flow control (full-duplex)

16K jumbo frame size support

Automatic address learning and address aging

Case and Installation

External 5V DC, 2.5A power supply
DIN-Rail and wall-mount design
Supports 6000 VDC Ethernet ESD protection
100 meters over CAT. 6A / CAT.7 at 10Gbps copper port
0 to 50 degrees C operating temperature
Plug and Play installation

1.2 Package Contents

- FCU-6001-SFP+
- 5V, 2.5A Power Adapter



FCU-6001-SFP+ User Manual V 1.0

2. Hardware Description

2.1 Physical Dimensions

Figure 2.1, below, shows the physical dimensions of Antaira Technologies' FCU-6001-SFP+:



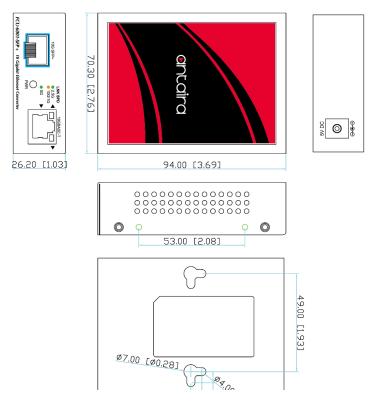


Figure 2.1
FCU-6001-SFP+ Physical Dimensions



FCU-6001-SFP+ User Manual V 1.0

2.32.2 Front Panel

The front panel of the FCU-600-SFP: Ethernet media converter (Figure 2.2).



Figure 2.2
Front Panel of the FCU-6001-SFP+

System

LED	Color	Function
DWD	Green	Lit: Power is active
PWR		Off: Power is inactive

Per 10G/5G/2.5G/1G BASE-T Port

LED	Color	Function
10/2.5/	Green	Lit: To indicate that the port is operating at 2.5Gbps.
1G	Orange	Lit: To indicate that the port is operating at 10/1Gbps.
5G	Green	Lit: To indicate that the port is operating at 5Gbps.



FCU-6001-SFP+ User Manual V 1.0

2.42.3 Rear View

Figure 2.3, below, shows the rear panel of the FCU-6001-SFP+ media converter.



Figure 2.3
One DC Jack for DC Power Input

2.52.4 Power Information

The central pole of the media converter's power jacks measures 2.5mm wide that require +5VDC power input. It conforms to the bundled AC-DC adapter and Antaira's media chassis. Should you have the issue of power connection, please contact your local sales representative.

Please keep the AC-DC adapter as a spare part when the FCU-6001-SFP+ is installed in a media chassis.



The device is a power-required device, meaning it will not work until it is powered. If your networks



FCU-6001-SFP+ User Manual V 1.0

need be active at all times, please consider using UPS (Uninterrupted Power Supply) for your device. It will prevent you from network data loss or network downtime.

In some areas, installing a surge suppression device may also help protect your media converter from being damaged by unregulated surge or current to the converter or the power adapter.



FCU-6001-SFP+ User Manual V 1.0

3. Mounting Installation

3.1 Stand Alone

- Step 1: Please find a secure location to lay the media converter.
- **Step 2**: Refer to Chapter **2.4 Power Information** on power supply to the media converter.

3.2 Wall Mounting

- Step 1: Please find the wall that can mount the media converter.
- Step 2: Screw two screws on the wall.

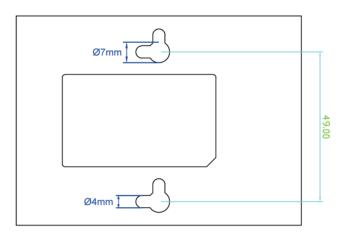


Figure 3-1: FCU-6001-SFP+ Switch Bottom Side

- **Step 3:** Hang the media converter on the screws from the wall.
- Step 4: Refer to Chapter 2.4 Power Information on power supply to the media converter.



FCU-6001-SFP+ User Manual V 1.0

3.3 Media Chassis Installation

To install the media converter in a 19-inch standard rack, follow the instructions described below.

Step 1: Place your media converter on a hard, flat surface with the front panel positioned towards your front side.

Step 2: Carefully slide in the module until it is fully and firmly fitted into the slot of the chassis. The Power LED of the media converter will turn ON.

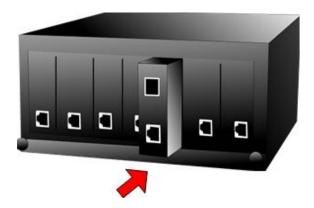


Figure 3-2: Insert Gigabit Media Converter into an Available Slot



- 1. Never push the converter into the slot with force; it could damage the chassis.
- 2. The media converter chassis supports hot-swap. There is no need to turn off the whole chassis before sliding in the new converter.

Caution



FCU-6001-SFP+ User Manual V 1.0

4. Hardware Installation

4.1 Installing the SFP+ Transceiver

The sections describe how to insert an SFP+ transceiver into an SFP+ slot.

The SFP+ transceivers are hot-pluggable and hot-swappable. You can plug in and out the transceiver to/from any SFP+ port without having to power down the media converter.



It is recommended to use Antaira SFP+s on the media converter. If you insert an SFP+ transceiver that is not supported, the media converter will not recognize it.

■ 10GBASE-X SR/LR:

Before connecting the other switches, workstation, or media converter, please do the following:

- Make sure both sides of the SFP+ transceiver are with the same media type (i.e. 10GBASE-SR to 10GBASE-SR, 10GBASE-LR to 10GBASE-LR).
- 2. Check whether the fiber-optic cable type matches the SFP+ transceiver model.
- To connect to 10GBASE-SR SFP+ transceiver, use the multi-mode fiber cable with one side being the male duplex LC connector type.
- 4. To connect to 10GBASE-LR SFP+ transceiver, use the **single-mode** fiber cable with one side being the male duplex LC connector type.

Connecting the fiber cable

- 1. Attach the duplex LC connector of the network cable to the SFP+ transceiver.
- 2. Connect the other end of the cable to a device like a switch with SFP+ installed, fiber NIC on a workstation, or a media converter.

Removing the Transceiver Module

- 1. Make sure there is no network activity by consulting or checking with the network administrator; or through the management interface of the switch/converter (if available) disabling the port in advance.
- 2. Remove the fiber optic cable gently.
- 3. Turn the lever of the MTB module to a horizontal position.
- 4. Pull out the module gently through the lever.



Never pull out the module without pulling the lever or the push bolts on the module. Directly pulling out the module with effort could damage the module and SFP+ module slot of the media converter.



FCU-6001-SFP+ User Manual V 1.0

■ 10G/5G/2.5G/1G BASE-T

The 10G/5G/2.5G/1G BASE-T port comes with auto-negotiation capability. It automatically supports 1GBASE-T, 2.5GBASE-T, 5GBASE-T and 10GBASE-T networks. Users only need to plug a working network device into the 10G/5G/2.5G/1G BASE-T port, and then turn on the media converter. The port will automatically run at 1000Mbps, 2500Mbps, or 5000Mbps and 10000Mbps after the negotiation with the connected device.

Connecting the UTP Cable

The 10G/5G/2.5G/1G BASE-T port uses RJ45 socket -- similar to a phone jack -- for connection of unshielded twisted-pair cable (UTP). The 10G/5G/2.5G/1G BASE-T uses Cat5e/6/6A/7 UTP (see table below). Maximum distance is 100 meters (328 feet).

Standard	Transfer Speed	Cable Requirement (100M)
10GBASE-T	10000Mbit/s	Cat 6A/7
5GBASE-T	5000Mbit/s	Cat 6/6A/7
2.5GBASE-T	2500Mbit/s	Cat 5e/6/6A/7
1000BASET	1000Mbit/s	Cat 5e/6/6A/7



FCU-6001-SFP+ User Manual V 1.0

4.2 Cabling

This section describes the functionalities of the media converter's components and guides you to how to install it on the desktop. Basic knowledge of networking is assumed. Please read this chapter completely before continuing.

Step 1: Unpack the media converter.

Step 2: Connect the 5V DC power adapter to the FCU-6001-SFP+ and verify that the Power LED lights up. (Please refer to the **2.4 Power Information** section for power input.)

Step 3:

- 3-1: Prepare a twisted-pair, straight-through Category 5e/6/7 UTP cable for Ethernet connection.
- **3-2:** Prepare a fiber cable for connection to the 10GBASE-T SFP+ slot, and make sure both sides of the SFP transceiver are with the same media type.

(Please refer to the 3.5 Cable Connection section for the type of connection.)

Step 4:

4-1: Insert one side of **Category 5e/6/7 cable** into the media converter Ethernet port (RJ45) while the other side of Category 5e/6/7 cable into the network devices' Ethernet port (RJ45), e.g., switch, PC or server.

The UTP port (RJ45) LED on the media converter will light up when the cable is connected with the network device. (Please refer to the **2.2 LED Indicators** section for the functions of LED lights.)

4-2: Connect the **fiber cable**. Attach the duplex LC connector on the network cable to the SFP+ transceiver. Attach the fiber cable from the FCU-6001-SFP+ to the fiber network. TX, RX must be paired at both ends.

Step 5: When all the connections are all set and the LED lights all show normally, the installation is complete.



FCU-6001-SFP+ User Manual V 1.0

5. Trouble Shooting

This chapter contains information to help you solve issues. If the media converter is not functioning properly, make sure the media converter is set up according to instructions in this manual.

The per port LED is not lit

Solution:

Check the cable connection of the media converter.

Performance is bad

Solution:

Check the speed duplex mode of the partner device. The media converter usually runs in auto-negotiation mode. If the partner is set to half duplex, the performance will be poor.

Per port LED is lit, but the traffic is irregular

Solution:

Check that the attached device is not set to dedicate full duplex. Some devices use a physical or software switch to change duplex modes. Auto-negotiation may not recognize this type of full-duplex setting.

Why the Media Converter doesn't connect to the network

Solution:

Check per port LED on the media converter. Make sure the cable is installed properly. Make sure the cable is the right type. Turn off the power. After a while, turn the power on again.



FCU-6001-SFP+ User Manual V 1.0

6. Technical Specifications

Table 6.1 has the technical specifications for Antaira Technologies' FCU-6001-SFP+:

Model	FCU-6001-SFP+	
Hardware Specifications		
Copper Interface	1 x 1G/2.5G/5G/10GBASE-T RJ45 Auto-MDI/MDI-X, auto-negotiation	
Fiber Optic Interface	1 x 10GBASE-X R SFP+ interface	
LED	System: PWR (Green) 10G/5G/2.5G/1G BASE-T RJ45 Interfaces: 1G/10G LNK (Orange) 5G/2.5G LNK (Green)	
ESD Protection	6KV DC	
Enclosure	Compact-sized metal case	
Installation	Desktop, wall mountable Media converter chassis installation Optional DIN-Rail kit	
Dimensions (WxDxH)	94 x 70 x 26mm	
Weight	180g (device only)	
Power Requirements	5V DC, 2A max.	
Power Consumption	3.75 watts / 12.8 BTU per hour max.	
Converter Specifications		
Fabric	20Gbps	
Jumbo Frame	Over 16K	
Network Cables	10G/5G/2.5G/1G BASE-T: 10GCat 6A/Cat 7 5GCat 6/Cat 6A/Cat 7 1G/2.5GCat 5e/Cat 6/Cat 6A/ Cat 7 Cat 5/5e/6/6A/7 UTP cable (100 meters, max.) EIA/TIA-568 100-ohm STP (100 meters, max.) 10GBASE-LR/SR/BX: 50/125µm or 62.5/125µm multi-mode fiber optic cable, up to 300m 9/125µm single-mode fiber optic cable, up to 60km	
Standards Conformance		
Regulatory Compliance	FCC Part 15 Class A, CE	
Operating environment	0 ~ 50 degrees C	
Storage environment	-10 ~ 70 degrees C	
Operating Humidity	5 ~ 95%, relative humidity (non-condensing)	
Storage Humidity	5 ~ 95%, relative humidity (non-condensing)	
Standards Compliance	IEEE 802.3ab 1000BASE-T IEEE 802.3bz 2.5G/5GBASE-T IEEE 802.3an 10GBASE-T IEEE 802.3ae 10Gbps Ethernet IEEE 802.3x full-duplex flow control	



FCU-6001-SFP+ User Manual V 1.0

Antaira Customer Service and Support

(Antaira US Headquarter) + 844-268-2472

(Antaira Europe Office) + 48-22-862-88-81

(Antaira Asia Office) + 886-2-2218-9733

Please report any problems to Antaira:

www.antaira.com / support@antaira.com

www.antaira.eu / info@antaira.eu

www.antaira.com.tw / info@antaira.com.tw

Any changes to this material will be announced on the Antaira



Assured Systems

Assured Systems is a leading technology company with over 1,500 regular clients in 80 countries, deploying over 85,000 systems to a diverse customer base in 12 years of business. We offer high-quality and innovative rugged computing, display, networking and data collection solutions to the embedded, industrial, and digital-out-of-home market sectors.

US

sales@assured-systems.com

Sales: +1 347 719 4508 Support: +1 347 719 4508

1309 Coffeen Ave Ste 1200 Sheridan WY 82801 **USA**

FMFA

sales@assured-systems.com

Sales: +44 (0)1785 879 050 Support: +44 (0)1785 879 050

Unit A5 Douglas Park Stone Business Park Stone ST15 0YJ **United Kingdom**

VAT Number: 120 9546 28

Business Registration Number: 07699660